

HOW TO INSTALL YOUR COMBO CHAIR WHEEL BRACKET RETROFIT KIT

BEFORE YOU START:

Make sure you have enough room around your Combo Chair to work with.


TOOLS YOU WILL NEED

- Drill (not included)
- 1/4" drill bit (not included)
- 7/16" wrench, crescent wrench or pliers (not included)
- 5/32" Allen wrench provided (GEN9145)

PARTS LIST

(please use Photo 1 for a visual orientation of each part)

- One (1) Wheel bracket with wheels installed
- Three (3) 1-1/4" button-head Allen bolt (GEN9001)
- Three (3) 1/4" flat washer (GEN9204)
- Three (3) 1/4-20 lock nut (GEN9021)

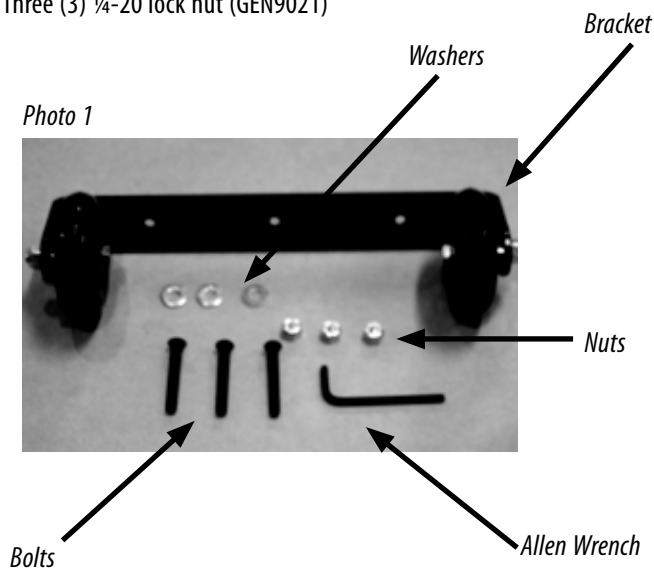

Questions? Please call Balanced Body at 1-800-PILATES.

NOTE: Balanced Body is not responsible for equipment damage caused by incorrect installation.



1-800-745-2837 • 916/388-2838 • Fax 916/379-9277

8220 Ferguson Avenue • Sacramento, CA 95828

www.pilates.com • info@pilates.com

STEP ONE

Find the center of the combo chair. Measure 2-1/2" from bottom and at that point make a mark for drilling. See Photo 2.


Photo 2 2 1/2" from bottom of chair



STEP TWO

Using a 1/4" bit, drill a hole on the mark from step one. See Photo 3

Photo 3 Drill hole into mark

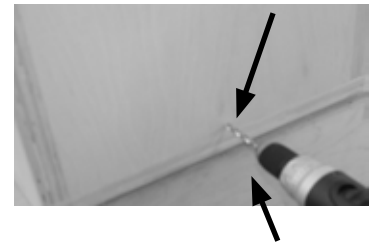

STEP THREE

Attach the bracket to the chair with the button-head Allen bolt, the washer and locknut in the hole you just drilled. See Photo 4.


Photo 4 Bottom of chair



STEP FOUR

Hold the wheel bracket level. Then use the bracket as a template to drill the two remaining holes. See Photo 5.

Photo 5

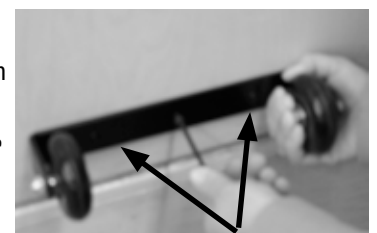

Drill other holes in spaces here

Step Five

Use the remaining bolts, washers, and lock nuts to secure the bracket to the chair. Your chair should now look like Photo 6.

Photo 6



Bracket appropriately installed on back of chair