

# How to install your Combo Chair Wheel Bracket

## Before you start:


Make sure you have enough room around your Combo Chair to work with.

## Tools you will need

- 5/32" Allen wrench provided (GEN9145)

## Step One

Using the provided Allen key, unscrew the three bolts at the bottom of the chair as shown below.

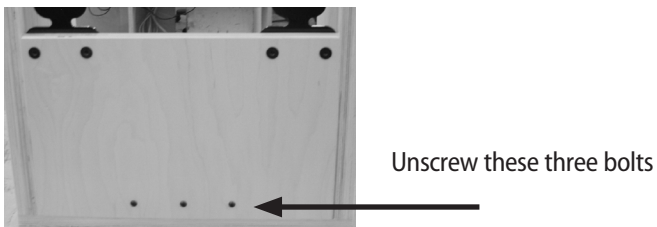

## Step Two

Attach the bracket to the chair frame and, using the Allen key, screw the bolts back in as shown.



## Step Three

Your wheel bracket should now look like the picture below.



**Questions?** Please call Balanced Body's Denise Coleman or Dan Richards at 1-800-PILATES.

**NOTE:** Balanced Body is not responsible for equipment damage caused by incorrect installation.



1-800-745-2837 • 916/388-2838 • Fax 916/379-9277  
8220 Ferguson Avenue • Sacramento, CA 95828  
www.pilates.com • info@pilates.com